 


tend (DIN RAIL MOUNTED) FUSE BOX

FEATURES

1. The fuse boxcar be mounted in TBR-N rail or panel directly.
2. Cabling range from 1.5mm²-8mm².
3. Make sure power has been cut off before change fuse. The indicator lamp will turn on when power is off.

MODEL DESIGNATION



DESIGNATION	Signal	DESCRIPTION
1. Mounting hole	TFBR	Din rail mounted fuse box
2. No. of pole	1 2 3	1-POLE 2-POLE 3-POLE
3. Indicator lamp	N2 N3	110-220 VAC 380-440 VAC None


SPECIFICATION

Rated voltage	Rated current	Operating temperature	Humidity	Application	Fuse size
600 VAC max.	32 A	-40° to +80° C	95% RH max.	cable protection Motor protection	10X38



DIMENSIONS

WIRING DIAGRAM



 
TFBR-321



TFBR-322

  

TFBR-323

   

FUSE BOX (With indicator lamp)

TFBR-321N



TFBR-322N



TFBR-323N

